

## forward adjusting backstrap


**1**



First drill a line of 4mm holes about 25mm in length at a position of 25mm down the front side tower of seat (image). Open up hole with a sharp knife to form a slot. Repeat on other side of seat.

**2**

Screw in two self tapping screws and M5 washers through cockpit top and into the rear tower of seat moulding (image).

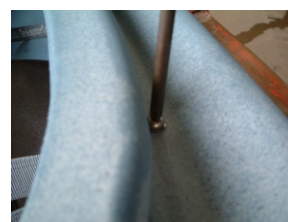

**3**



Thread the top adjuster strap tie through tongue and into the pre-drilled large hole in the hidden side of the main tower and through newly created slot.

**4**

Open thigh grip screw. Place on adjuster buckle, 1 x 6mm penny washer and replace small washer and screw (repeat for other side).



**5**



Place bottom strap through the gap in the towers and buckle up behind padded bracket.

Drill 2 sets of 4mm holes at rear of cockpit rim at 25mm length as shown. Open up slots with sharp knife, thread straps through and buckle up. At this point sit in the cockpit and adjust to suit.



**6**

These instructions are intended as a guide only. If you have any problems in fitting your accessories, please do not hesitate to contact TekSport on the number below.